



- 12-996 tenant, 2500-3500 cards and access codes
- Programming: Local via Keypad or RS232, Remote via dial-up modem
- Programming and Data Management with AeGIS Management Software
- Distinctive ringing and call waiting
- Event recording with 1200 events buffer.
- 2 x 16 Electronic Liquid Crystal Display (LCD)
- Two relays
- Up to 32 Satellite card reader, keypad and combo
- Auto Unlock Timer, Time Zones, and Holiday Time Zones
- Optional 26-Bit Wiegand Reader
- Indoor or outdoor, surface and full-flush mount
- Brushed Stainless Steel Face

Warranty: 24 months

SPECIFICATIONS	ORDER PART NUMBER	ACCESSORIES
<p>POWER INPUT: 12VAC/40VA (supplied) or 12VDC/40VA</p> <p>CURRENT CONSUMPTION: Main Lobby Panel: 700mA idle, 900mA operating. Main Relay Controller: 50mA Idle, 680mA operating.</p> <p>EMERGENCY BATTERY: 12VDC/4Ahr (not supplied)</p> <p>OPERATING ENVIRONMENT: 32°F to 140°F. Humidity 0%-95% non-condensing. <i>Heater is required if the temperature is below 32°F.</i></p> <p>DIALING: Tone.</p> <p>COMMUNICATION: 1200 Baud Modem, RS-485 and RS-232.</p> <p>MOUNTING: Surface and full-flush.</p> <p>DIMENSIONS: Main Lobby Panel Surface 13-9/16"(H) x 11-1/4"(W) x 3-3/4"(D) Full-flush 13-7/8" (H) x 11-9/16"(W) x 3-3/4" (D) Full-flush mounting ring Inside 13-3/4" (H) x 12" (W) x 3-11/16" (D) Outside 18" (H) x 15-5/8" (W) Main Relay Controller and Expansion 21-5/8"(H) x 12-1/8"(W) x 5-1/4"(D)</p>	<p>MAIN LOBBY PANEL Surface Mount 9600CR25NCP 600 tenants 2500 cards/codes 92KCR35NCP 2000 tenants 3500 cards/codes Full-flush Mount 9600CR25NCFPP 500 tenants 1000 cards/codes 92KCR35NCFPP 2000 tenants 3500 cards/codes</p> <p>MAIN RELAY CONTROLLER MS79012 (12 tenants relay cabinet). MS79024 (24 tenants relay cabinet). MS79036 (36 tenants relay cabinet). MS79048 (48 tenants relay cabinet). MS79060 (60 tenants relay cabinet). MS79072 (72 tenants relay cabinet). MS79084 (84 tenants relay cabinet). MS79096 (96 tenants relay cabinet). MS79108 (108 tenants relay cabinet). MS79120 (120 tenants relay cabinet).</p> <p>EXPANSION RELAY (MX79xxx) is needed if the system is above 120 tenants. The MX79xxx interfaces with the Main Relay Cabinet (MS79120). To Calculate the total number of tenant is MS79120 + MX79xxx+ MX79XXX+.....+ MX79ZZZ. XXX= 012, 024, 036,....., 120 and ZZZ is 012, 024 or 036</p>	<p>26-Bit Wiegand Proximity Readers and cards UWCR Wiegand Proximity Reader. UIISO credit card size (passive card) UCLAM Clam Shell (passive card) UFOB Key Fob (passive fob) Satellite Systems USCR RS-485 Satellite Card Reader USKP RS-485 Satellite Keypad UMCK RS-485 Master Card Reader/Keypad UCRM 26 Bit Wiegand RS-485 Controller Module Video Package UVPC Color Camera Package. UVPB Video Balun for Twisted Pair video transmission Pedestal Mounting Post, Adapter Plate and Mounting Ring UPM1S Standard Single Arm (42"H, 5"x5" base) UPM4S Standard Single Arm (47"H, 5"x5" base) UPM1L Large Single Arm (47"H, 8"x8" base) UPM6L Large Single Arm (64"H, 8"x8" base) UPM2 Double Vertical Arm (44"/84"H, 8"x8" base) UPM5 Double Horizontal Arm (47"H, 8"x8" base) UPMDB64 Single Arm Direct Buriel (64"H) UAP09 Adapter Plate AeGIS 9000P Series UPM12E 12" Expansion Arm use for all UPM Miscellaneous Accessories AMDM 56K Desktop/Laptop Modem FFM9 Full-flush mounting ring, <i>included w/ system</i> USP1 AC and Telephone Surge Protector. AHP5 Heater Pad with Thermostat. UBAT1 12VDC 4.5 Ahr backup battery. <i>Specifications subject to change without prior notice</i></p>