

AeGIS 7000S SERIES

(Model: 7000S, 7000SC, and 7000SV)



TABLE OF CONTENTS

[Limitation of Liability](#)

[Products Limited Warranty](#)

[Limited Warranty Limits and Exclusions](#)

[CHAPTER 1 GETTING STARTED](#)

[CHAPTER 2 INSTALLATION AND WIRING DIAGRAM](#)

[General Wiring Diagram](#)

[Power Wiring Diagram](#)

[VOIP Diagram](#)

[Door Strike Wiring Diagram](#)

[Input Devices and Door Sensor Wiring Diagram](#)

[Satellite System Wiring Diagram](#)

[CHAPTER 3 KEYPAD CORRELATION TABLE](#)

[CHAPTER 4 PROGRAMMING](#)

[Log-in to Programming Mode](#)

[Function Code 00: Change Master Code](#)

[Function Code 01: Add New Tenant Directory](#)

[Function Code 02: Edit Existing Directory](#)

[Function Code 03: Delete Tenant Directory](#)

[Function Code 04: Clear All Tenant Directories](#)

[Function Code 05: Enable or disable Call](#)

[Function Code 06: Add New Access Code](#)

[Function Code 07: Delete Access Code](#)

[Function Code 15: Initializing Event Recording](#)

[Function Code 16: Auto Unlock Schedule \(AUS\)](#)

[Function Code 17: Time Zone \(TMZ\)](#)

[Function Code 18: Holiday Zone \(HLD\)](#)

[Function Code 19: Directory Digit](#)

[Function Code 20: AUXIN1](#)

[Function Code 21: AUXIN2](#)

[Function Code 22: Do Not Disturb](#)

[Function Code 23: Lock-out Count](#)

[Function Code 24: Alarm](#)

[Function Code 25: Keypad Beep](#)

[Function Code 26: Door Beep](#)

[Function Code 27: Talk Time](#)

[Function Code 28: Unlock Relay 1 Time](#)

[Function Code 29: Unlock Relay 2 Time](#)

[Function Code 33: Temporary Code](#)

[Function Code 34: Special Code](#)

[Function Code 35: Temporary Card](#)

[Function Code 36: Special Card](#)

[Function Code 38: System Acknowledge](#)

[Function Code 39: Disable and Enable Remote Access](#)

[Function Code 40: DTMF Relay 1](#)

[Function Code 41: DTMF Relay 2](#)

[Function Code 42: Relay 2 Mode Function Code](#)

[43: Do Not Disturb Zone Function Code 44:](#)

[Disable Time Zone Relay Function Code 45:](#)

[Relay 1 and 2 Unlock Timer Function Code 46:](#)

[Firmware Version](#)

[Function Code 48: PBX Enable](#)

[Function Code 49: Edit Existing Access Code, Temporary Code and Special Code](#)

[Function 50: Erase Memory to Factory Default](#)

[Function Code 51: Welcome Screen](#)

[CHAPTER 5 OPERATIONS](#)

[Function Code 08: Clear All Access Codes](#)

[Function Code 09: Access Code Digit](#)

[Function Code 10: Add New Card or Transmitter](#)

[Function Code 11: Delete Card or Transmitter](#)

[Function Code 12: Clear All Cards and Transmitters](#)

[Function Code 13: Set Time](#)

[Function Code 14: Set Date](#)

[Call from the System](#)

[Opening Door Remotely](#)

[Opening Door Using Access Code, Temporary Code and Special Code](#)

[Opening Door Using Card, Temporary Card, and Special Card](#)

[Extending Talk Time](#)

[Call the System from Remote Location](#)

LIMITATIONS OF LIABILITY

△
This manual is subject to change without notice.

Pach and Company is not liable for any errors that might occur from use of this document, nor is any commitment to update the information herein implied.

Pach and Company does not assume any liability for any damages, which may arise in installation or use of the AeGIS 7000S Series Pach and Company does not assume liability for any incompatibility between the AeGIS 7000S Series and users devices.

Pach & Company reserves the right to make changes without prior notice to any products in order to improve reliability, function or design.

PRODUCTS LIMITED WARRANTY



New Products warranty (24 months)

- Products are warranted to be free of defects in material or workmanship for a period of **24 months** from the date of purchase.
- Products must be purchased from authorized distributors and install by qualified installers.
- Warranty can only be honored to the authorized distributors or qualified installers.
- RMA must be issued by Pach and Company Technical Department for any replacement part(s).
- Replacement part(s) will be shipped via **UPS Ground** within the 24 months warranty. The defective part(s) must be returned to Pach and Company within 15 days.
- Pach and Company **is not responsible for time, travel, and/or labor costs of any distributor and/or dealer-installer**, including but not limited to, any expenses to install, uninstall or reinstall hardware/software/firmware related to warranty issues, product enhancements, or product failures.

Wiegand Card, Keyfob and Transmitter Warranty (90 days)

- Warranted to be free of defects in material and workmanship for a period of **90 days** from the date of purchase.
- RMA must be issued by Pach and Company Technical Department for replacement.
- Replacement part(s) will be shipped via **UPS Ground** within the 24 months warranty. The defective part(s) must be returned to Pach and Company within 15 days.
- Pach and Company **is not responsible for time, travel, and/or labor costs of any distributor and/or dealer-installer**, including but not limited to, any expenses to install, uninstall or reinstall hardware/software/firmware related to warranty issues, product enhancements, or product failures.

Replacement Parts Warranty (6 months)

- Warranted to be free of defects in material and workmanship for a period of **6 months** from the date of purchase.
- RMA must be issued by Pach and Company Technical Department for replacement.
- Replacement part(s) will be shipped via **UPS Ground** within the 6 months warranty. The defective part(s) must be returned to Pach and Company within 15 days.
- Pach and Company **is not responsible for time, travel, and/or labor costs of any distributor and/or dealer-installer**, including but not limited to, any expenses to install, uninstall or reinstall hardware/software/firmware related to warranty issues, product enhancements, or product failures.



Introduction

Pach & Company thanks and congratulates you on the purchase of your AeGIS 7000S Series Telephone Entry Access Control Systems. The manual is designed to guide you through the proper programming and use of the AeGIS 7000S Series. It is important for you to read and follow the manual completely. The product comes with **two years Limited Warranty**, see above for more detail.

System Description

The AeGIS 7000S Series is multi tenant telephone entry system.

Requires analog dial tone (dedicated phone is recommended). The analog dial can be provided by the phone company (7000S), GSM Module (7000SC) or Analog Terminal Adapter Via Google Voice (7000SV).

Capacity 100-600 tenants, 300-1000 cards and codes See Chapter 2 for more detail.

Specification

Input power: 12VAC 40VA (12VAC supplied), 12VDC 3.0A

Minimal Current consumption: 900-1150mA

Dimension:

Surface mount: 12-9/16" (H) x 6-9/16"(W) x 3-1/8"(D)

16 x 1 Liquid Crystal Display (LCD) Viewing 13mm x 9mm

26-Bit Wiegand Input

RS-485 for Slave system (up to eight slaves)

Two on-board relays

Two Auxiliary inputs

Operating environment 10°F-140°F Relative Humidity 0%-95% non-condensing

Double 3/4" knock-out on the back and bottom panel

Features

20 programmable time zones

10 programmable auto-unlock schedules and 20 holiday schedules

10 programmable temporary cards and access codes for limited use

10 programmable unlock hold cards

Postal Lock ready.

Accessories and Replacement parts Visit our web site www.pach-co.com

Unpacking the System All the items below come with the AeGIS 7000S Series Contact Pach and Company for missing part(s) at (888) 678-7224, Monday-Friday 7:00 AM 4:00 PM Pacific Standard Time.

12VAC 40VA TRANSFORMER (1)

PAIR OF BARREL KEYS (2)

5-PIN GREEN TERMINAL BLOCK (1)

6-PIN GREEN TERMINAL BLOCK (1)

4-PIN GREEN TERMINAL BLOCK (2)

3-PIN GREEN TERMINAL BLOCK (1)

2-PIN GREEN TERMINAL BLOCK (2)

QUICK GUIDE (1)

CHAPTER 2

Installation and Wiring Diagram



Follow the wiring diagram carefully. Improper installation will void the warranty. *Please call technical support in case you have any difficulties during the installation.* Click the selection below for different applications

[General Wiring Diagram](#)

[Power Wiring Diagram](#)

[VOIP Diagram](#)

[Door Strike Wiring Diagram](#)

[Input Devices and Door Sensor Wiring Diagram](#)

[Satellite System Wiring Diagram](#)

2.1 General Wiring Diagram

Figure 2.1
General Wiring Diagram

2.2 Power Wiring Diagram



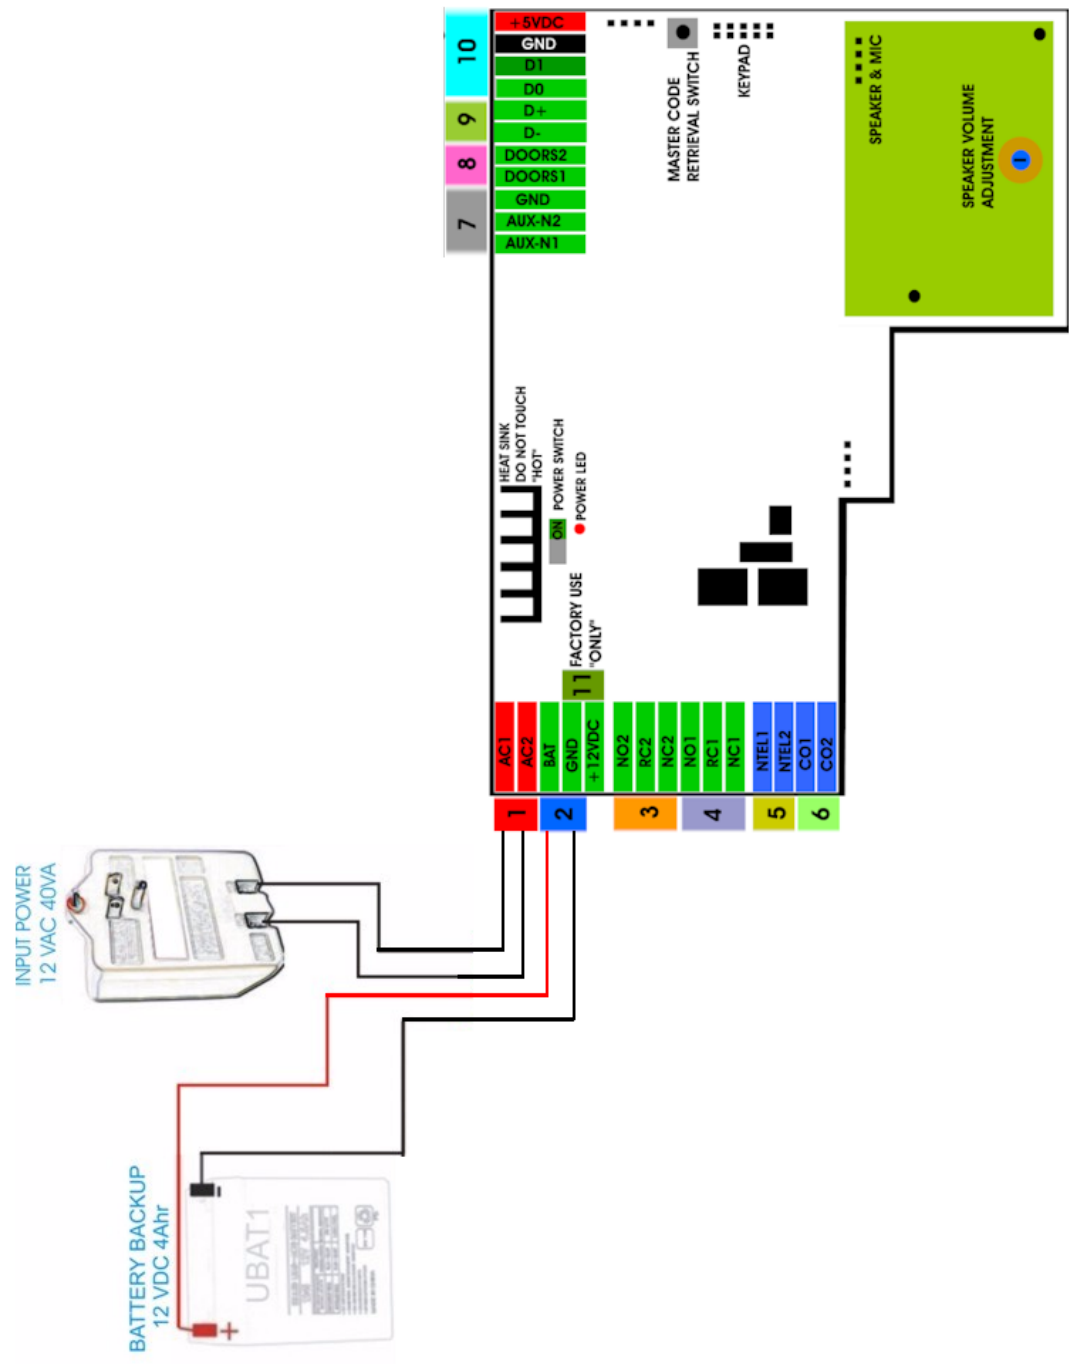


Figure 2.2
Power Wiring Diagram

2.3 VOIP Wiring Diagram

 In rare occasion, compatibility issue may occur between the AeGIS 7000S Series and your VOIP line.

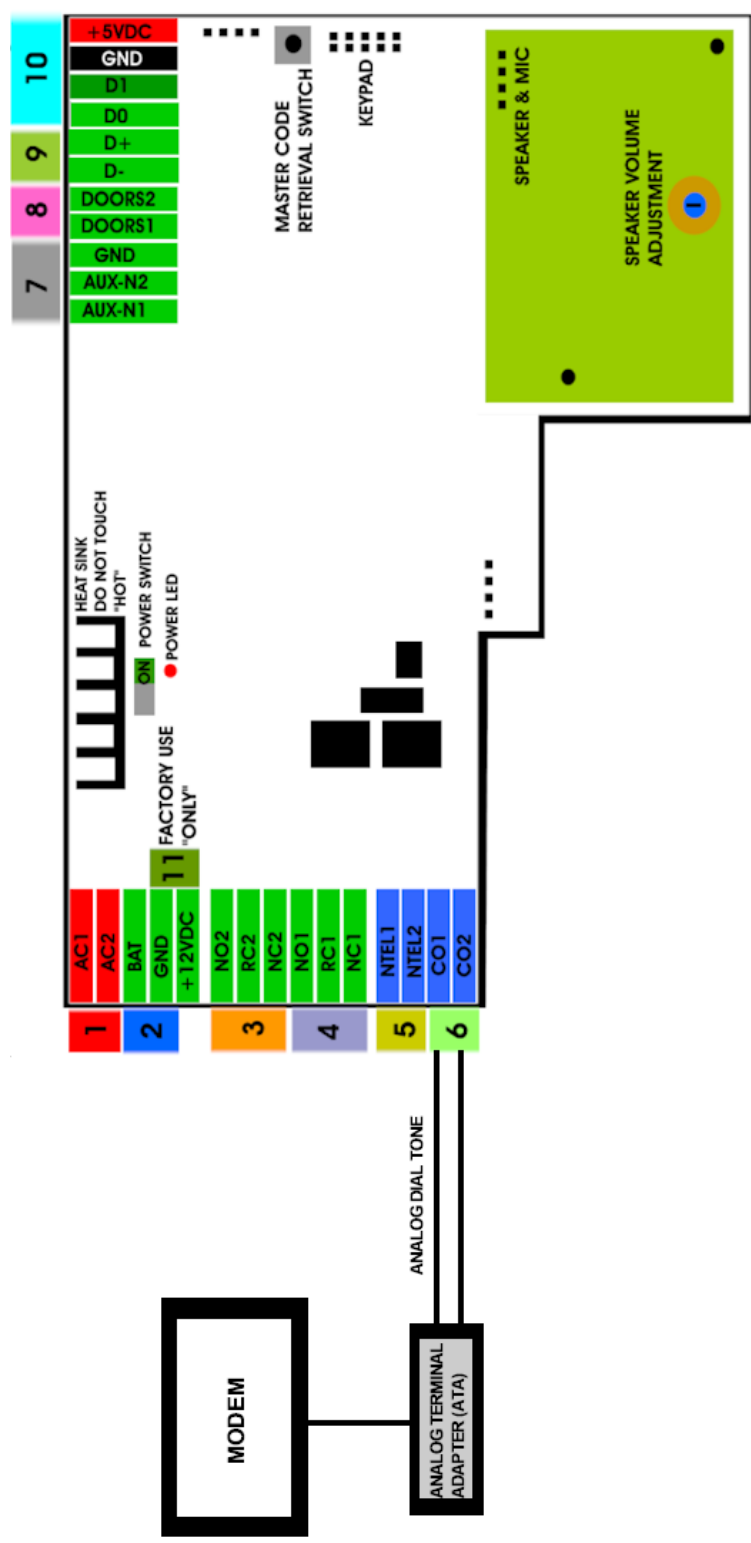


Figure 2.3
Wiring Diagram

2.4 Door Strike Wiring Diagram

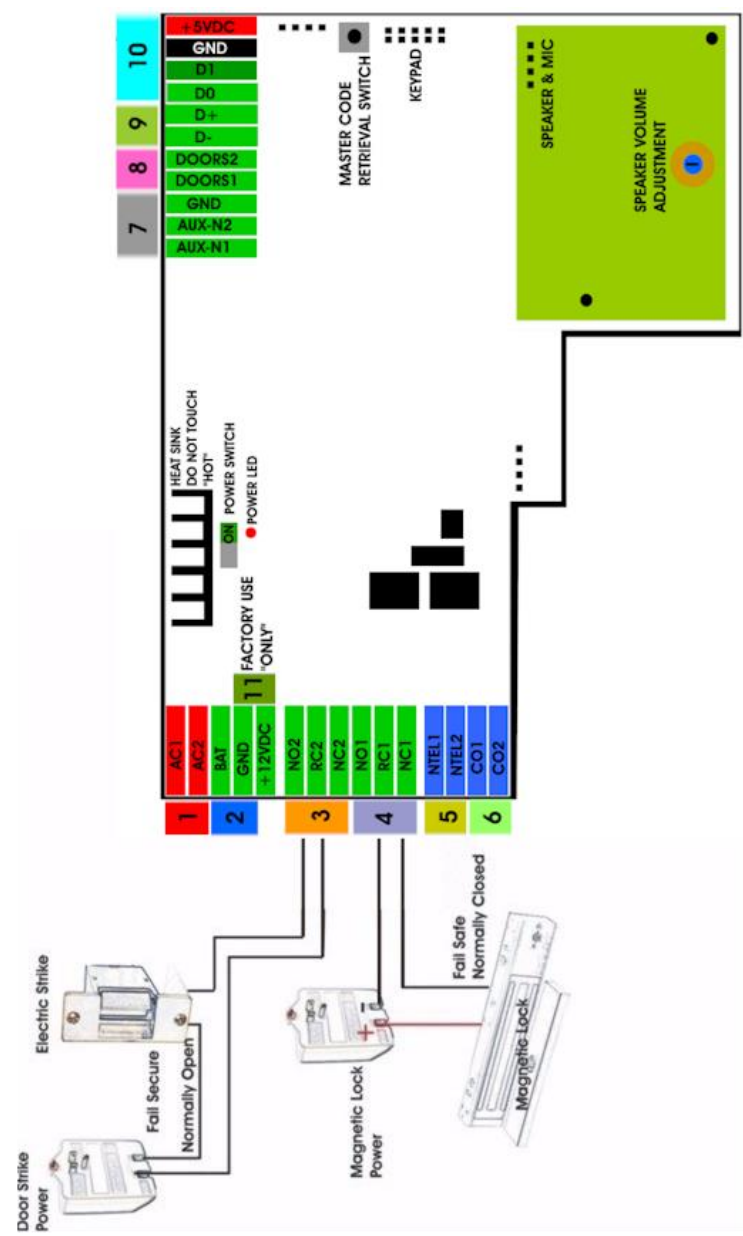


Figure 2.4
Door Strike Wiring Diagram

2.5 Input Device and Door Sensor Wiring Diagram

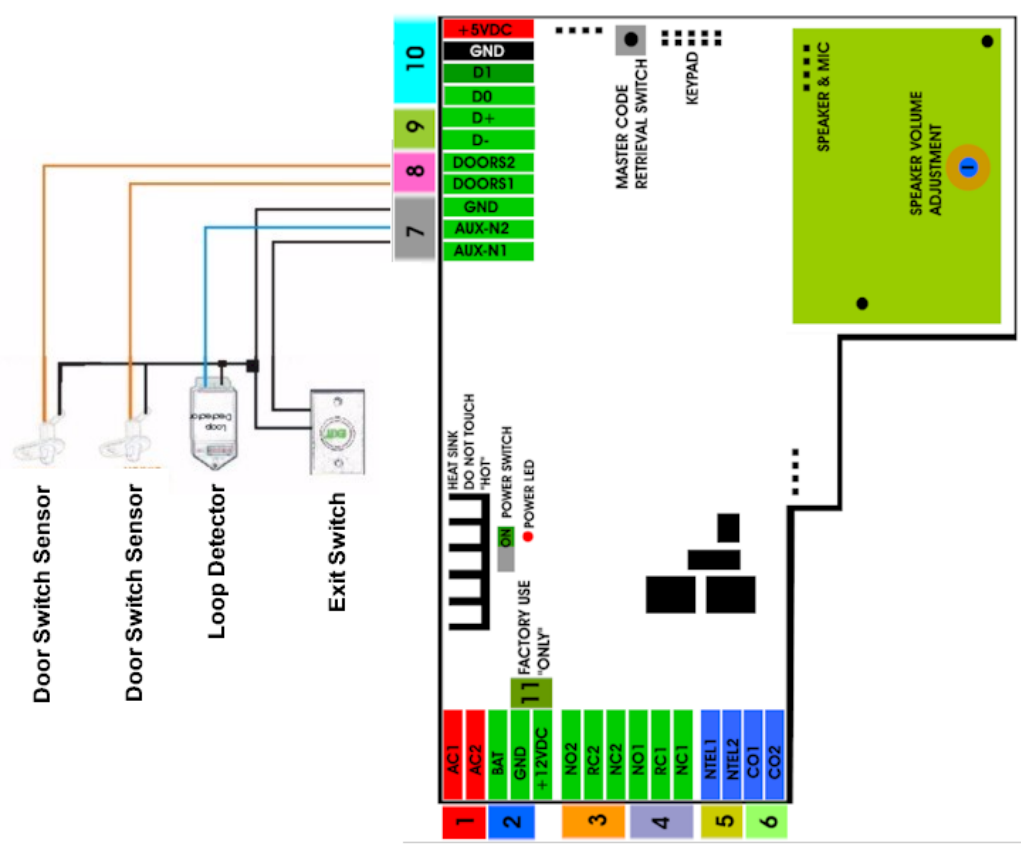


Figure 2.5
Input Device and Door Sensor Wiring Diagram

2.6 Satellite System Wiring Diagram

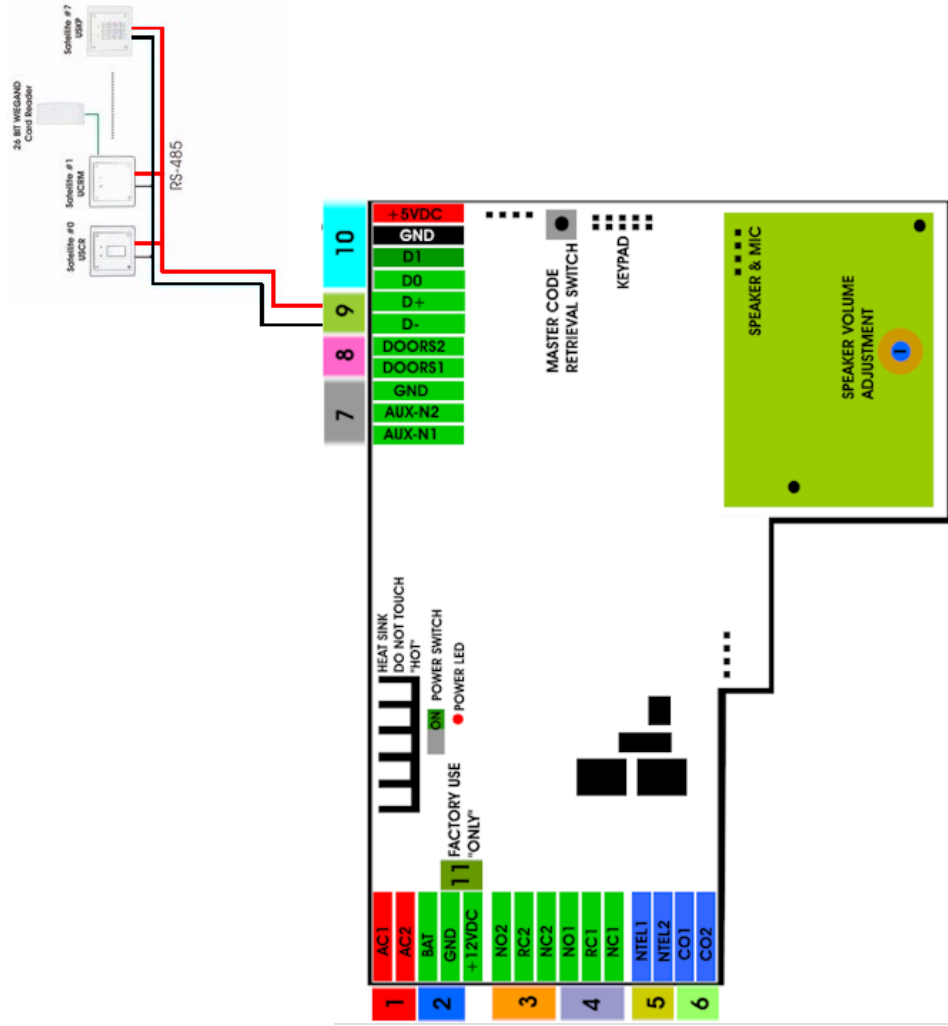


Figure 2.6
Satellite System Wiring Diagram

Assuming all wiring has been done properly according to [chapter 2](#) then turn the system s power on as shown on [figure 2.1](#) number 10. The LCD will go into a cycling mode as below

LCD Display OK --- Flash OK --- RTC OK --- DTMF OK --- INIT START --- INIT COMPLTE --- SCROLLING

CHAPTER 3
Keypad Correlation Table

The QR5 buttons are lighted. Below are the correlation table for each key.

1	= 1 _ . , ? : ; ! @ + - * / = # < > %	1	2	3	<table border="0" style="margin-left: 20px;"> <tr> <td style="border: 1px solid black; padding: 5px; text-align: center;">6</td> <td style="padding: 5px;">M N O m n o 6</td> </tr> <tr> <td style="border: 1px solid black; padding: 5px; text-align: center;">7</td> <td style="padding: 5px;">P Q R S p q r s 7</td> </tr> <tr> <td style="border: 1px solid black; padding: 5px; text-align: center;">8</td> <td style="padding: 5px;">T U V t u v 8</td> </tr> <tr> <td style="border: 1px solid black; padding: 5px; text-align: center;">9</td> <td style="padding: 5px;">W X Y Z w x y z 9</td> </tr> <tr> <td style="border: 1px solid black; padding: 5px; text-align: center;">0</td> <td style="padding: 5px;">SPACE</td> </tr> </table>	6	M N O m n o 6	7	P Q R S p q r s 7	8	T U V t u v 8	9	W X Y Z w x y z 9	0	SPACE				
6	M N O m n o 6																		
7	P Q R S p q r s 7																		
8	T U V t u v 8																		
9	W X Y Z w x y z 9																		
0	SPACE																		
2	A B C a b c 2	4	5	6															
3	D E F d e f 3	7	8	9															
4	G H I g h i 4	*	0	#															
5	J K L j k l 5	<table border="0" style="margin-left: 20px;"> <tr> <td style="border: 1px solid black; padding: 5px; text-align: center;">1</td> <td style="border: 1px solid black; padding: 5px; text-align: center;">2</td> <td style="border: 1px solid black; padding: 5px; text-align: center;">3</td> </tr> <tr> <td style="border: 1px solid black; padding: 5px; text-align: center;">ABC</td> <td style="border: 1px solid black; padding: 5px; text-align: center;">DEF</td> <td style="border: 1px solid black; padding: 5px; text-align: center;">GHI</td> </tr> <tr> <td style="border: 1px solid black; padding: 5px; text-align: center;">JKL</td> <td style="border: 1px solid black; padding: 5px; text-align: center;">MNO</td> <td style="border: 1px solid black; padding: 5px; text-align: center;">PQRS</td> </tr> <tr> <td style="border: 1px solid black; padding: 5px; text-align: center;">TUV</td> <td style="border: 1px solid black; padding: 5px; text-align: center;">WXYZ</td> <td style="border: 1px solid black; padding: 5px; text-align: center;">*</td> </tr> <tr> <td style="border: 1px solid black; padding: 5px; text-align: center;">0</td> <td style="border: 1px solid black; padding: 5px; text-align: center;">#</td> <td style="border: 1px solid black; padding: 5px; text-align: center;">#</td> </tr> </table>			1	2	3	ABC	DEF	GHI	JKL	MNO	PQRS	TUV	WXYZ	*	0	#	#
1	2	3																	
ABC	DEF	GHI																	
JKL	MNO	PQRS																	
TUV	WXYZ	*																	
0	#	#																	

Figure 3.1



CHAPTER 4 Programming

Log-in to Programming Mode

1. Press 0 and # simultaneously, then release, the welcome screen will stop scrolling.
2. Enter 4-digit master code (default=0000) then press # (if you do not know the master code, see [chapter 2 step 8](#))

SELECT FUN:

Function Code 00 - Change Master Code

1. [Log-in to programming](#)
2. Enter 00 then #

MASTER CODE:0000

3. Enter new master code then press #

Function code 01 - Add New Tenant Directory

By default the directory digit is set to 3 but it can be changed to 3 or 4 digit. See [function code 19](#)

1. [Log-in to programming](#)
 2. Enter 01 then #
- FWD DIR(0-9):0
3. Enter directory number 0-9 (*directory is in single digit and cannot be changed*) then #

NAME

see [Chapter 3](#) for keypad layout

4. Enter name up to 16 characters (*name can be a person real name, apartment number, etc., directory will be sorted in alphabetical order*) then press #

PHONE NUM

5. Enter the tenant phone number up to 16-digit (*phone number can be land line number, cellular number or Voice over IP (VOIP) number. Note: Occasionally VOIP phones may have problems releasing door*) then press #.

[Return to step 3 to enter another tenant directory](#)

Function Code 02 - Edit Tenant Directory

1. [Log-in to programming](#)

2. Enter 02 then #, the display will show

FWD DIR(0-9):0

3. Enter tenant directory number to be edited then #

NAME

PACH AND COMPANY

Enter new name up to 16 characters then press # *or press # without entering anything to keep the existing name*

PHONE NUM

see [Chapter 3](#) for keypad layout

4. Enter the a new tenant phone number up to 16-digit then press # or *press # without entering anything to keep the existing number.*

[Return to step 3 to edit another tenant directory](#)

Function Code 03 - Delete Tenant Directory



1. [Log-in to programming](#)

2. Enter 03 then #

DEL FWD(0-9):_

3. Enter the tenant directory to be deleted (0-9) then press #

DELETED

if directory exists

NOT EXIST

if directory does not exist

Function Code 04 - Clear All Tenant Directories



1. [Log-in to programming](#)

2. Enter 04 then #

CLR ALL FWD(1):

3. Do the following:

- Press 1 (to clear all directories) then press #
- Press * to cancel

ALL CLR

Function Code 05 - Call Forwarding

Option 1 must be selected. Default is 1 (enable)



1. [Log-in to programming](#)

2. Enter 30 then #

FWD(E=1, D=0):1

3. Enter 0= disable (default) or 1= enable then press #

Function Code 06 - Add New Access Code

An access code is a keyless entry code to unlock the door. An access code can be programmed in 4, 5, 6, 7, or 8 digits, see [function code 09](#) to change the access code number of digit.

1. [Log-in to programming](#)

2. Enter 06 then #

NEWCODE:

3. Enter the access code (4-8 digit, see [function code 09](#)), then press #

NAME

see [Chapter 3](#) for keypad layout

4. Enter name up to 16 characters, then press #

DOOR(1,2,3):

5. Enter door 1 or 2, or 3 for both, then press #

TMZ SET(1-3):

6. Enter time zone 1-3 then press #

TMZ NO(0-20):__

7. Enter 00 (*24 hours*) - 20 see [function code 17](#) then press #

SAT ID:_____

8. Enter satellite system ID 0-7 (*enter 0 if no satellite connected to the QR5*) then press #

Another(0-1):_

9. Enter

0= no more additional time zone then press # and return to [step 3](#) to program another access code

1= add additional time zone then press # and return to [step 6](#)

* = exit programming

Function Code 07 - Delete Access Code

1. [Log-in to programming](#)

2. Enter 07 then #

DELCODE: _ _ _ _ _

3. Enter code to be deleted then press #

CODE DELETED

if access code exists

CODE NOT EXIST

if access code does not exist

Repeat this step to delete another code

Function Code 08 - Clear All Access Codes



1. [Log-in to programming](#)

2. Enter 07 then #

CLR ALL CODE(1) _

3. Enter

1 to clear all access code then press #

ALL CODE CLEARED

or

* to cancel

Function Code 09 - Access Code Digit



1. [Log-in to programming](#)

2. Enter 09 then #

CODE DIGIT: 4

3. Enter 4, 5, 6, 7 or 8 (default setting is 4 digit) then press #

Function Code 10 - Add New Card



1. [Log-in to programming](#)

2. Enter 10 then #

NEWCARD: _ _ _ _ _

3. Present the card in front of the card reader black window, the number will register automatically (or enter the last 8 digits of the number on the card) then press # or press the transmitter button (the number will automatically register) then press #

NAME

_____ see [Chapter 3](#) for keypad layout

4. Enter name up to 16 characters then press #

DOOR(1,2,3):

5. Enter door 1 or 2, or 3 for both then press #

TMZ SET(1-3):

6. Enter time zone 1-3 then press #

TMZ NO(0-20):__

7. Enter 00 (*24 hours*) - 20 see [function code 17](#) then press #

SAT ID:_____

8. Enter satellite system ID 0-7 (*enter 0 if no satellite connected to the QR5*) then press #



9. Enter
0= no more additional time zone then press # and return to [step 3](#) to add program another card
1= add additional time zone then press # and return to [step 6](#)
* = exit programming

Function Code 11 - Delete Card



1. [Log-in to programming](#)
2. Enter 11 then #



3. Present the card in front of the card reader black window, the number will register automatically (or enter the last 8-digits of the number on the card) then press #

CARD DELETED

if card exists

CARD NOT EXIST

if card does not exist

Repeat this step to delete another code

Function Code 12 - Clear All Cards



1. [Log-in to programming](#)
2. Enter 12 then #



3. Enter
1 to clear all cards or transmitters then press #

ALL CARD CLEARED

or

* to cancel

Function Code 13 - Set Time



1. [Log-in to programming](#)
2. Enter 13 then #



3. Enter
HH= in military time
MM= minute
 the press #

Function Code 14 - Set Date



1. [Log-in to programming](#)
2. Enter 14 then #

DATE: 2011/08/11

3. Enter YYYY/MM/DD
YYYY= year
MM= Month
DD= Date
 then press #

DAY(0=SUN): 2

4. Enter
0= Sunday, **1**= Monday, **2**= Tuesday, **3**= Wednesday, **4**= Thursday, **5**= Friday, **6**= Saturday
 then press #

DAYLIGHT(0-1):1

5. Enter 0= NO Daylight Saving Zone (Hawaii, Indiana and Arizona) 1=Daylight Saving Zone
 then press #

Function Code 15 - Initializing Event recording



The events are stored in the RAM buffer. The Event RAM buffer can hold 600 events. The Events are stored as first in first out (FIFO). This function code will clear the event buffer.

1. [Log-in to programming](#)
2. Enter 15 then #

EVENT INIT(1):_

Enter 1 then # to clear event buffer

INIT EVENT BUF...

or

* to cancel deletion

Function Code 16 - Auto Unlock Schedule (AUS)



Open and close the door according to the schedule programmed. if the open time is 06:00 and close time 18:00, door 1,2 or both will unlock at 06:00 am and close at 06:00 pm. 10 AUS can be programmed.

1. [Log-in to programming](#)

2. Enter 16 then #

AUS NO(0-9):_

3. Enter AUS (0-9) then press #

ADD=1 DEL=0:_

4. Enter
0= Delete the existing AUS the press #

DELETED

or

1= Add AUS then press #

OPEN TIME: _ _ _ _

5. Enter open time in military then press #

CLOSE TIME: _ _ _ _

6. Enter close time in military then press #

DAY(0-6) _ _ _ _ _ _

7. Enter
0= Sunday, 1= Monday, 2= Tuesday, 3= Wednesday, 4= Thursday, 5= Friday, 6= Saturday
then press #

DOOR(1-3):_

8. Enter
1= Relay 1 (door 1)
2= Relay 2 (door 2)
3= Both relay 1 and 2
then press #

9. [Return to step 3 to enter another AUS](#)

Function Code 17 - Time Zone (TMZ)



20 Time Zone can be programmed and up to three time zone can be assigned to each access code or card to allow access during a certain time of the day.

1. [Log-in to programming](#)

2. Enter 17 then #

TMZ NO(0-20):_ _

3. Enter 01-20 (00=24 hours access automatically) then press #

ADD=1 DEL=0:_

4. Enter

0= Delete the existing time zone then press #

DELETED

or

1= add new time zone then press #

START TIME: _ _ _ _

5. Enter start time in military then press

END TIME: _ _ _ _

6. Enter end time in military then press

DAY(0-6) _ _ _ _ _

7. Enter

0= Sunday, 1= Monday, 2= Tuesday, 3= Wednesday, 4= Thursday, 5= Friday, 6= Saturday
then press #

[Return to step 3 to program more time zone](#)

Function Code 18 - Holiday Zone (HLD)



HLD is to over ride Time Zone (TMZ) and Auto Unlock Schedule (AUS) during the holidays. Up to 20 Holiday Zone can be programmed

1. [Log-in to programming](#)

2. Enter 18 then

HLD NO(1-20): _ _

3. Enter 01-20 then press

ADD=1 DEL=0: _

4. Enter

0= Delete the existing holiday zone then press #

DELETED

or

1= add new holiday zone then press #

HOLIDAY: _ _ _ _

5. Enter month and date (i.e. 0704 for U.S.A Independence Day) then press

[Return to step 3 to add more holiday zones.](#)

Function Code 19 - Directory Digit



Directory digit is a unique number that must be assigned for each tenant. Directory digit can be an apartment number. By default is set to 3 but it can be changed to 2,3 or 4 digit. It also uses to do [direct call](#).

1. [Log-in to programming](#)

2. Enter 19 then



DIR DIGIT: 3

3. Enter 2, 3 or 4 digit then press #

Function Code 20 - AUXIN1

AUXIN1 is used for input device such as postal lock, infrared sensor, exit button, etc..AUXIN1 is associated with relay 1

1. [Log-in to programming](#)
2. Enter 20 then #



AUXIN1:0

3. Enter
 - 0= disable (default setting)
 - 1= Enable control by relay 1 open door interval, see [function code 28](#)
 - 2= relay 1 control by AUXIN1
 then press #

Function Code 21 - AUXIN2

AUXIN2 is used for input device such as postal lock, infrared sensor, exit button, etc.. AUXIN2 is associated with relay 2

1. [Log-in to programming](#)
2. Enter 21 then #




AUXIN2:0

3. Enter
 - 0= disable (default setting)
 - 1= Enable control by relay 2 open door interval, see [function code 29](#)
 - 2= relay 2 control by AUXIN2
 then press #

Function Code 22 - Do Not Disturb

If Do Not Disturb is enabled visitors can't call from the system

1. [Log-in to programming](#)
2. Enter 21 then #




NO DIST EN(1):0

3. Enter 0= disable, 1= enable then press #

Function Code 23 Lock-out Count

The system will be disabled in about 60 seconds after pressing invalid access code or swiping invalid card as specified on the Lock-out Count.

1. [Log-in to programming](#)
2. Enter 23 then #



LOCKOUT CNT:3

3. Enter 1-9 (default=3) then press #

Function Code 24 Alarm



The system will make have warning alarm if invalid code or card has been enter according to the setting on [function code 23](#).

1. [Log-in to programming](#)
2. Enter 24 then #

ALARM NO(0-3):1

3. Enter
0= disable, **1**=disable system for 60 seconds and local beep (default setting), **2**= disable system for 60 seconds with no beep
3= call directory (0-9) then press #

Function Code 25 Keypad Beep



Turn the keypad press beep On or Off

1. [Log-in to programming](#)
2. Enter 25 then #

KEY BEEP(0-1):1

3. Enter 0= off, 1= On (default) then press #

Function Code 26 Door Beep



Turn the door beep On or Off

1. [Log-in to programming](#)
2. Enter 26 then #

DOOR BEEP(0-1):1

3. Enter 0= off, 1= On (default) then press #

Function Code 27 Talk Time



The amount of time the visitor can talk to the tenant. The timer starts as soon as the system is offhook.

1. [Log-in to programming](#)
2. Enter 27 then #

TALK TIME:060

3. Enter 10-240 seconds then press #

Function Code 28 Unlock Relay 1 Time



Relay 1 trigger time.

1. [Log-in to programming](#)
2. Enter 28 then #

DOOR1 TIME:012

3. Enter 01-99 (second) then press #

Function Code 29 Unlock Relay 2 Time

 *Relay 2 trigger time.*

1. [Log-in to programming](#)
2. Enter 29 then #

DOOR2 TIME:012

3. Enter 01-99 (second) then press #

Function Code 33 Temporary Code

 *The code will expire after a certain amount of used (1-10 times) in the programming, Up to 10 temporary codes can be programmed.*

1. [Log-in to programming](#)
 2. Enter 33 then #
- TEMP CODE(0-1)**
3. Enter 0= delete existing temporary code or 1= add temporary code then press #

CODE NO(1-10): _ _

4. Enter code number 01-10 then press #

NEWCODE:

5. Enter 4-8 digit code, see digit setting on [function code 09](#)

NAME

----- see [Chapter 3](#) for keypad layout

6. Enter name then press #

DOOR(1,2,3):

7. Enter 1= relay 1(door 1), 2= relay 2 (door 2) or 3= both relay then press #

TMZ SET(1-3):

8. Enter time zone set 1-3 then press #

TMZ NO(0-20): __

9. Enter 00 (*24 hours*) - 20 see [function code 17](#) then press #

SAT ID: _____

10. Enter Sat id 0-7 then press # (*enter 0 if no satellite connected to the QR5*)

Another(0-1): _

11. Enter
 0= no more additional time zone then press # and return to [step 3](#) to program another temporary code
 1= add additional time zone then press # and return to [step 8](#)
 * = exit programming

Function Code 34 Special Code



Unlock hold (open hold) and use same code to lock (close) door or gate. Up to 10 special codes can be programmed.

1. [Log-in to programming](#)

2. Enter 34 then #

SPEC CODE(0-1): _

3. Enter 0= delete 1= add then press #

CODE NO(1-10): __

4. Enter code 01-10 then press #

NEWCODE:

5. Enter 4-8 digit code, see digit setting on [function code 09](#)

NAME

see [Chapter 3](#) for keypad layout

6. Enter name then press #

DOOR(1,2,3):

7. Enter 1= relay 1(door 1), 2= relay 2 (door 2) or 3= both relay then press #

TMZ SET(1-3):

8. Enter time zone 1-3 then press #

TMZ NO(0-20): __

9. Enter 00 (*24 hours*) - 20 see [function code 17](#) then press #

SAT ID: _ _ _ _ _

- Enter Sat ID 0-7 then press # (enter 0 if no satellite connected to the QR5)

Another(0-1): _

- Enter
 0= no more additional time zone then press # and return to [step 3](#) to program another temporary code
 1= add additional time zone then press # and return to [step 8](#)
 * = exit programming

Function Code 35 Temporary Card



The job or card will expire after a certain amount of used (1-10 times) in the programming, Up to 10 temporary fobs or cards can be programmed.

- [Log-in to programming](#)
- Enter 35 then #

TEMP CARD(0-1): _

- Enter 0= delete 1= add then press #

CARD NO(1-10): _

- Enter card 01-10 then press #

NEWCARD: _ _ _ _ _

- Present the card or fob in front of the black window, the system will register the card or fob 8-digit number printed then press #

NAME

_ _ _ _ _

see [Chapter 3](#) for keypad layout

- Enter name and press #

DOOR(1,2,3):

- Enter 1= relay 1(door 1), 2= relay 2 (door 2) or 3= both relay then press #

TMZ SET(1-3):

- Enter time zone 1-3 then press #

TMZ NO(0-20): _ _

- Enter 00 (*24 hours*) - 20 see [function code 17](#) then press #

SAT ID: _ _ _ _ _

- Enter Sat ID 0-7 then press # (enter 0 if no satellite connected to the QR5)

Another(0-1): _

- Enter

- 0= no more additional time zone then press # and return to [step 3](#) to program another temporary code
- 1= add additional time zone then press # and return to [step 8](#)
- * = exit programming

Function code 36 Special Card



Unlock hold (open hold) and use same job or card to lock (close) door or gate. Up to 10 special fobs or cards can be programmed.

1. [Log-in to programming](#)

2. Enter 36 then #

SPEC CARD(0-1): _

3. Enter 0= delete 1= add then press #

CARD NO(1-10): _

4. Enter code 01-10 then press #

NEWCARD: _ _ _ _ _

5. Enter 4-8 digit code, see digit setting on [function code 09](#)

NAME

see [Chapter 3](#) for keypad layout

6. Present the card or fob in front of the black window, the system will register the card or fob 8-digit number printed then press #

DOOR(1,2,3):

7. Enter 1= relay 1 (door 1), 2= relay 2 (door 2) or 3= both relay then press #

TMZ SET(1-3):

8. Enter time zone 1-3 then press #

TMZ NO(0-20): _ _

9. Enter 00 (*24 hours*) - 20 see [function code 17](#) then press #

SAT ID: _ _ _ _ _

10. Enter Sat ID 0-7 then press # (*enter 0 if no satellite connected to the QR5*)

Another(0-1): _

11. Enter
 - 0= no more additional time zone then press # and return to [step 3](#) to program another temporary code
 - 1= add additional time zone then press # and return to [step 8](#)
 - * = exit programming

Function Code 38 System Acknowledge



The system will answer an incoming call after a number of rings. Sharing the phone line with fax or alarm system, disable this code.

1. [Log-in to programming](#)
2. Enter 38 then #

SYS ACK(0-9):0

3. Press
0= disable auto answer
1-9= answer in 1-9 rings
then press #

Function Code 39 Disable and Enable Remote Access

If no remote opening allow, disable it using this function code. Default setting is enabled.

1. [Log-in to programming](#)
2. Enter 39 then #

DTMF ACC(0-1):1

3. Press
0= disable remote access
1= enable remote access (default)
then press #

Function Code 40 DTMF Relay 1

*By default the DTMF remote opening relay 1 (door 1) key number is set to 9 means pressing 9 will remotely trigger relay 1 (door 1). The number can be changed by selecting 1-9 to trigger relay 1 (door 1). **Note:** by default remote access for relay 2 is set to 8, see [function code 41](#). If you set relay 1 for key number 8 then you **MUST** change relay 2 to different key number even though relay 2 is not used.*

1. [Log-in to programming](#)
2. Enter 40 then #

DTMF DOOR1(1-9)9

3. Press 1-9 (9 is default setting) then press #

Function Code 41 DTMF Relay 2

*By default the DTMF remote opening relay 2 (door 2) key number is set to 8 means pressing 8 will remotely trigger relay 2 (door 2). The number can be changed by selecting 1-9 to trigger relay 2 (door 2). **Note:** by default remote access for relay 1 is set to 9, see [function code 42](#). If you set relay 2 for key number 9 then you **MUST** change relay 1 to different key number even though relay 1 is not used.*

1. [Log-in to programming](#)
2. Enter 41 then #

DTMF DOOR2(1-9)8

3. Press 1-9 (9 is default setting) then press #



Relay 2 can be set to four different mode: 1= door control, 2= trigger simultaneously as relay 1, 3= alarm mode (see [function code 24](#)), 4= turn relay 2 on/off remotely (DTMF key 7/6)

1. [Log-in to programming](#)

2. Enter 42 then #

RELAY2 MODE:1

3. Enter
1= door control, 2=trigger simultaneously as relay 1, 3= alarm mode (see [function code 24](#)), 4= turn relay 2 on/off remotely (DTMF key 7/6), then press #

Function Code 43 Do Not Disturb Time Zone



If you do not want to be disturbed from someone calling you from the system during certain hours of the days, you can create Do Not Disturb Time Zone. For example: 22:00-06:00 Monday-Sunday. Up to 10 Do Not Disturb Time Zones ca be programmed.

1. [Log-in to programming](#)

2. Enter 43 then #

DND NO(0-9):_

3. Enter 0-9 then press #

ADD=1 DEL=0:_

4. Enter 0= delete, 1= add then press #

START TIME: _ _ _ _

5. Enter start time (military time) the press #

END TIME: _ _ _ _

6. Enter end time then press # (military time, end time must be later than start time, if start time: 22:00 hour and end time: 06:00, two time zone must be created (22:00 hour - 24:00 hour, 00:01 hour 06:00 hour)

DAY(0-6): _ _ _ _ _ _

7. Enter
0= Sunday, 1= Monday, 2= Tuesday, 3= Wednesday, 4= Thursday, 5= Friday, 6= Saturday
then press #

8. [Return to step 3](#) to program another time zone

Function Code 44 Disable Time Zone Relay



The system's relay can be disabled during certain time but the system is still in full operation. Maximum 10 disable time zones.

1. [Log-in to programming](#)

2. Enter 44 then #

DISABLE(0-9):_

3. Enter 0-9 then pres #

ADD=1 DEL=0: _

4. Enter

0= Delete the existing time zone then press #

DELETED

or

1= add new time zone then press #

START TIME: _ _ _ _

5. Enter start time in military then press #

END TIME: _ _ _ _

6. Enter end time in military then press #

DAY(0-6) _ _ _ _ _

7. Enter

0= Sunday, 1= Monday, 2= Tuesday, 3= Wednesday, 4= Thursday, 5= Friday, 6= Saturday then press #

[Return to step 3 to program more time zone](#)

Function Code 45 Relay 1 and 2 Unlock Timer



Relay 1 and 2 can be unlock using count down timer 01-98 hours or 00=lock or 99= unlimited unlock hold.

1. [Log-in to programming](#)

2. Enter 45 then #

WHICH DOOR: _

3. Enter relay 1 (door 1) then press #

DOOR1 HOURS:00

then press #

or relay 2 (door 2) then press #,

DOOR2 HOURS:00

then press #

Function Code 46 Firmware Version



Firmware version

1. [Log-in to programming](#)

2. Enter 46 then #

V2.0 09/09/11

Function Code 48 PBX Enable



If the system is installed behind a Private Branch Exchange (PBX) then 9 is necessary before dialing an outside line. If this function is enabled then the system can only be dialing an outside line, it can't dial the extension.

1. [Log-in to programming](#)

2. Enter 48 then #

PBX EN(0-1):0

3. Enter 0= disable or 1= enable then press #

PBX NUM:9

4. Enter the number to access dial tone to dial an outside line, generally 9 is the default number for most PBX system, then press #

Delay(1-5s):5

5. Select delay time for the PBX system to access dial tone, generally 2-3 second delay is plenty of time, then press #

Function Code 49 Edit Existing Access Code, Temporary Code and Special Code



1. [Log-in to programming](#)

2. Enter 49 then #

CODE: _ _ _ _

3. Editing an Access Code [click here](#) or
Editing a Temporary Code, [click here](#) or
Editing a Special code, then [click here](#)

Function Code 50 Erase Memory to Factory Default



Warning: This function code will erase the memory to factory default, no way to restore them unless the database has been saved in the computer.

1. [Log-in to programming](#)

2. Enter 50 then #

MEM DEFAULT(1):_

3. Enter 0= cancel or 1= continue then press #

MEM DEFAULT WAIT

Function Code 51 Welcome Screen




It consists of three segments and 16 characters for each segment

1. [Log-in to programming](#)

2. Enter 51 then #

***PRESS 3 or 6

3. 1st segment, enter the characters then press # see [Chapter 3](#) for keypad layout

 _to scroll. Pres

4. 2nd segment, enter the characters then press # see [Chapter 3](#) for keypad layout
5. 3rd segment, enter the characters then pres # see [Chapter 3](#) for keypad layout

CHAPTER 5

Operations



5.1 Call from the System



1. **Direct Call:** press # then directory code, see [function code 19](#)
2. **Scrolling:** press 3 or 6 to scroll name then press # to call the selected name

5.2 Opening Door Remotely



Relay 1 (door 1), press 9

Relay 2 (door 2), press 8

5.3 Opening Door Using Access Code, Temporary Code, and Special Code



Access code Standard Operation is keyless entry code to open the door and door will be closed automatically, see [function code 06](#)

Temporary Code is used for limited number of times, maximum 10 times then the code will be expired, see [function code 33](#)

Special Code is used to unlock hold door and then use same code to lock the door, see [function code 34](#)

Press * (display will stop scrolling) then press the 4, 5, 6, 7 or 8 digit access code as programmed on [Function Code 09](#)

5.4 Opening Door Using Card, Temporary Card, and Special Card



The AeGIS 7000S Series has built-in 26-Bit Wiegand Port. It is compatible with any 26 Bit Reader.

Card Standard Operation is used to open the door and door will be closed automatically, see [function code 10](#)

Temporary Card is used for limited of times, maximum 10 times then the card will be expired, see [function code 35](#)

Special Card is used to unlock hold door and then use same card to lock the door, see [function code 36](#)



Pach and Company UFOB, UCLAM and UISO ONLY work on the UWCR.

5.5 Extending Talk Time



The talk time timer is set on [function code 27](#). The warning beep will be heard one minute before the talk time is expired. It can be extended more another full cycle by pressing #

5.6 Call the System from Remote Location



1. *The system must be install in [Intercom and Call Forwarding Mode Wiring Diagram](#) or [Call Forwarding Mode wiring Diagram](#)*
2. [Function code 38](#) must be set at least for 1 ring
3. [Function code 39](#) must be set to 1
4. You must have the system phone number
5. Call the system phone number if the system answered, short beep will be heard.

6. Press # then 4-digit Master code (default is 0000), short beep will be heard if master code is accepted
7. Press * to establish two ways communication
8. Press 9 to release relay 1 (door 1) or 8 to release relay 2 (door 2).